SIMPLE START®
VEHICLE-TO-VEHICLE BATTERY BOOSTER
INSTRUCTION MANUAL

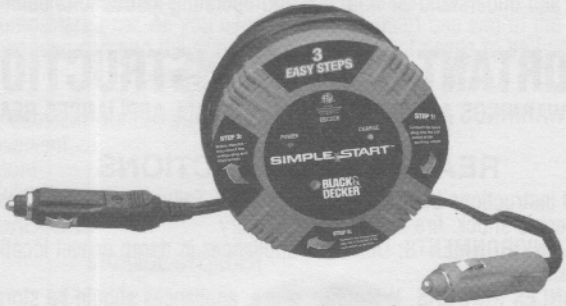

Intertek

Catalog Number BBC2CB

Thank you for choosing Black & Decker!
Go to www.Baccusglobal.com
to register your new product.

PLEASE READ BEFORE RETURNING THIS PRODUCT FOR ANY REASON:

If you have a question or experience a problem with your purchase, go to
HTTP://WWW.BACCUSGLOBAL.COM
for instant answers 24 hours a day.
If you can't find the answer or do not have access to the internet,
call 1-877-571-2391 from 9 a.m. to 5 p.m. EST, Mon. – Fri. to speak with an agent.
Please have the catalog number available when you call.

SAVE THIS MANUAL FOR FUTURE REFERENCE.

Cat. # BBC2CB
June 2011
Printed in China
Copyright © 2011 Baccus Global LLC

SAFETY GUIDELINES / DEFINITIONS

⚠ **DANGER:** Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

⚠ **WARNING:** Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

⚠ **CAUTION:** Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

CAUTION: Used without the safety alert symbol indicates potentially hazardous situation which, if not avoided, may result in property damage.

RISK OF UNSAFE OPERATION. When using tools or equipment, basic safety precautions should always be followed to reduce the risk of personal injury. Improper operation, maintenance or modification of tools or equipment could result in serious injury and property damage. There are certain applications for which tools and equipment are designed. Black & Decker strongly recommends that this product NOT be modified and/or used for any application other than for which it was designed. Read and understand all warnings and operating instructions before using any tool or equipment.

IMPORTANT SAFETY INSTRUCTIONS

⚠ **GENERAL SAFETY WARNINGS AND INSTRUCTIONS FOR ALL APPLIANCES READ ALL INSTRUCTIONS**

READ ALL INSTRUCTIONS

⚠ **WARNING:** Read all instructions before operating product. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

- **AVOID DANGEROUS ENVIRONMENTS:** Don't use appliances in damp or wet locations. Don't use appliances in the rain.
- **STORE IDLE APPLIANCES INDOORS.** When not in use, appliances should be stored indoors in dry, and high or locked-up place – out of reach of children.
- **DON'T FORCE APPLIANCE.** It will do the job better and with less likelihood of a risk of injury at the rate for which it was designed.
- **USE RIGHT APPLIANCE.** Do not use the appliance for any job except that for which it is intended.
- **DON'T ABUSE CORD.** Never carry appliance by cord or yank it to disconnect from receptacle. Keep cord from heat, oil, and sharp edges.
- **DON'T OVERREACH.** Keep proper footing and balance at all times.
- **DISCONNECT APPLIANCES.** Disconnect the appliance when not in use.
- **USE OF ACCESSORIES AND ATTACHMENTS.** The use of any accessory or attachment not recommended for use with this appliance could be hazardous. Note: Refer to the accessory section of this manual for further details.
- **CHECK DAMAGED PARTS.** Before further use of the appliance, a plug, wire or casing or other part that is damaged should be carefully checked to determine that it will operate properly and perform its intended function. Have defective parts replaced by manufacturer.
- Do not operate unit with damaged cord or plug; or if the unit has received a sharp blow, been dropped, or otherwise damaged in any way. Do not disassemble the unit; take it to a qualified service technician when service or repair is required. Incorrect reassembly may result in a risk of electric shock or fire, and will void warranty.
- Never submerge this unit in water; do not expose it to rain, snow or use when wet.
- To reduce risk of electric shock, disconnect the unit before attempting maintenance or cleaning.
- THIS UNIT IS NOT FOR USE BY CHILDREN AND SHOULD ONLY BE OPERATED BY ADULTS.

⚠ **CAUTION: TO REDUCE THE RISK OF INJURY OR PROPERTY DAMAGE:**

- Do not leave unit unattended while connected.
- Do not leave the unit's 12 Volt DC Accessory Plugs connected for more than 20 minutes at a time.
- Vehicles that have on-board computerized systems may be damaged if vehicle battery is jump-started. Before jump-starting, read the vehicle's owner's manual to confirm that external-starting assistance is suitable.
- This system is designed to be used only on vehicles with a 12 volt DC battery system. Do not connect to a 6 volt or 24 volt battery system.
- Make sure that the vehicle's accessory outlet is clean and free of debris before connecting the unit.

- Excessive engine cranking can damage a vehicle's starter motor. If the engine fails to start after the recommended number of attempts, discontinue jump-start procedures and look for other problems that may need to be corrected.

⚠ **WARNING: Do not use this jump-starter on a watercraft. It is not qualified for marine applications.**

⚠ **WARNING: NEVER connect this product to a positive grounded vehicle.**

- Read And Understand This Instruction Manual Before Using This Unit.

SAVE THESE INSTRUCTIONS

⚠ **WARNING: TO REDUCE THE RISK OF INJURY:**
Follow these instructions and those published by the battery manufacturer and manufacturer of any equipment you intend to use with this unit. Review cautionary markings on these products and on engine.

INTRODUCTION

Thank you for choosing the ***Black and Decker® Simple Start™ Vehicle-To-Vehicle Battery Booster***. This car to car booster is an innovative product that replaces the use of inconvenient booster cables to jump-start a car. All you need to do is to insert one end of the cable to the cigarette lighter socket of a working car, and the other end to the car that needs to be boosted.

FEATURES

- Vehicle-to-vehicle boosting without the trouble of traditional cables
- Compact and convenient
- LED status indicators
- Built-in Storage Cylinder

Controls and Functions

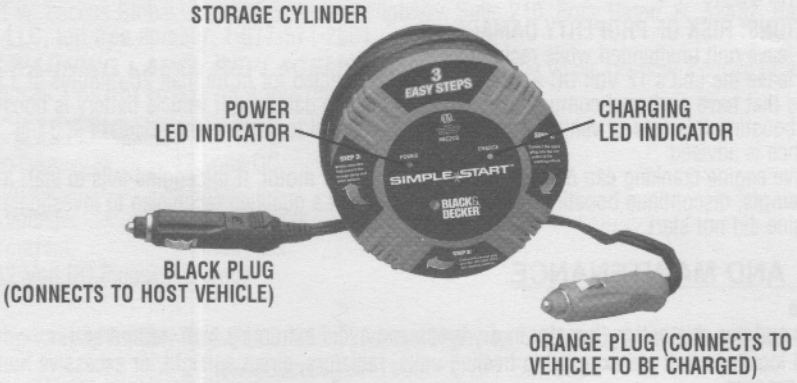

OPERATING INSTRUCTIONS

1. Insert the Black 12 Volt DC Accessory Plug into the 12 volt DC accessory outlet of the working car. Rotate the plug slightly to make sure there is good contact. The power LED indicator will light green.

   Notes:
   - Some vehicles require that the ignition key be turned to the Accessory position to activate the 12 volt DC Accessory Outlet.
   - If the Power LED Indicator does not light, the Black 12 Volt DC Accessory Plug is not connected properly to the working car's 12 Volt DC Accessory Outlet. Rotate the plug again to assure good contact.
   - If the Power LED Indicator lights solid red, the battery of the working car is in a fault condition, such as low battery voltage, high battery voltage or overheated.
2. Insert the Orange 12 Volt DC Accessory Plug into the 12 volt DC accessory outlet of the car to be boosted.

   Note: Turn OFF vehicle ignition and all accessories (radio, A/C, lights, connected cell phone chargers, etc.); place vehicle in "park;" and set the emergency brake.

3. Rotate the plug slightly to make sure there is good contact. The Power LED Indicator will light green and the Charging LED Indicator will flash red, indicating the charging process has begun.

Notes:

- Some vehicle require that the ignition key has to be on the Accessory position to activate the DC Accessory Outlet.
- If the Charging LED Indicator does not light, the Orange 12 Volt DC Accessory Plug is not connected properly to the 12 Volt DC Accessory Outlet of the car to be boosted. Rotate the plug again to assure good contact.
- If the Charging LED Indicator lights solid red, the battery of the car to be boosted is in a fault condition.

4. The Charging LED Indicator will turn green after a 20-minute countdown for charging. This indicates that the user can disconnect Orange 12 Volt DC Accessory Plug and attempt to start the vehicle.
5. **Important:** Disconnect the Orange Plug, then turn the ignition of the vehicle being charged and crank the engine in 5-6 second bursts until engine starts
6. If vehicle doesn't start after the first attempt; recharge for an additional 10-20 minutes.
7. Repeat step 5.
8. If the second attempt doesn't start the car, please discontinue usage and call the service center. The battery may be damaged.
9. Unplug the 12 Volt DC Accessory Plugs from both cars when the process is completed.

⚠ WARNINGS

- This battery booster is designed to be used only on vehicles with a 12 volt DC battery system. Do not connect to a 6 volt or 24 volt battery system.
- NEVER submerge this unit in water; do not expose it to rain, snow or use when wet.
- Replace worn or defective parts immediately — contact the Customer Service Department toll free 1-877-571-2391.

⚠ CAUTIONS: RISK OF PROPERTY DAMAGE

- Do not leave unit unattended while recharging.
- Do not leave the unit's 12 Volt DC Accessory Plugs connected for more than 20 minutes at a time.
- Vehicles that have on-board computerized systems may be damaged if vehicle battery is boosted. Before boosting this type of vehicle, read the vehicle manual to confirm that external-starting assistance is advised.
- Excessive engine cranking can damage the vehicle's starter motor. If the engine fails to start after the two attempts, discontinue boosting procedure and contact a qualified technician to investigate why the engine did not start.

CARE AND MAINTENANCE

Storage

1. Store and use this battery booster in dry areas and avoid extremely high temperatures.
2. Avoid locations that are exposed to heating units, radiators, direct sunlight, or excessive humidity or dampness.

Fuse Replacement (Orange and Black 12 Volt DC Plugs)

1. Unscrew the end cap of the DC plug (counterclockwise).
2. Remove spring center contact and fuse.
3. Check fuse with a continuity checker.
4. If blown, locate a replacement 12 amp volt fuse.
5. Replace the fuse, spring, contact and end cap.
6. Screw end cap clockwise until it is finger tight – DO NOT OVER-TIGHTEN.
7. Test for proper operation of the plug.

Other than the 12 Volt DC Plug fuses, there are no user-replaceable parts. Periodically inspect the condition of adapters, case and wires. Contact manufacturer to replace any components that have become worn or broken.

ACCESSORIES

Recommended accessories for use with your tool are available from your local dealer. If you need assistance regarding accessories, please contact manufacturer at 1-877-571-2391.

⚠ **WARNING:** The use of any accessory not recommended for use with this appliance could be hazardous.

SERVICE INFORMATION

Whether you need technical advice, repair, or genuine factory replacement parts, contact the manufacturer at 1-877-571-2391.

FULL ONE-YEAR HOME USE WARRANTY

The manufacturer warrants this product against defects in materials and workmanship for a period of ONE (1) YEAR from the date of retail purchase by the original end-user purchaser ("Warranty Period").

If there is a defect and a valid claim is received within the Warranty Period, the defective product can be replaced or repaired in the following ways: (1) Return the product to the retailer where product was purchased for an exchange (provided that the store is a participating retailer). Returns to retailer should be made within the time period of the retailer's return policy for exchanges only (usually 30 to 90 days after the sale). Proof of purchase may be required. Please check with the retailer for their specific return policy regarding returns that are beyond the time set for exchanges. (2) Return the product to the manufacturer for repair or replacement at manufacturer's option. Proof of purchase may be required by manufacturer.

This warranty does not apply to accessories, bulbs, fuses and batteries; defects resulting from normal wear and tear, accidents; damages sustained during shipping; alterations; unauthorized use or repair; neglect, misuse, abuse; and failure to follow instructions for care and maintenance for the product.

This warranty gives you, the original retail purchaser, specific legal rights and you may have other rights which vary from state to state or province to province. This product is not intended for commercial use.

Please complete the Product Registration Card and return within 30 days from purchase of the product to: Baccus Global LLC, 595 S. Federal Highway, Suite 210, Boca Raton, FL 33432. **Baccus Global LLC, toll-free number: 1-877-571-2391.**

FREE WARNING LABEL REPLACEMENT: If your warning labels become illegible or are missing, call 1-877-571-2391 for a free replacement.

SPECIFICATIONS

Input voltage:	12 volts DC
Input current:	8 amps
Output voltage:	14.5 volts max.
Output current:	6 amps max.
Fuse (12 Volt DC Plugs):	12 amps

Imported by Baccus Global LLC, 595 S. Federal Highway, Suite 210, Boca Raton, FL 33432
www.Baccusglobal.com • 1-877-571-2391